

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
ANCLAJE ESPECÍFICO PARA

KAWASAKI KLR 650 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1



SUPPORTO
SUPPORT
SUPPORT
HALTERUNG
SOPORTE

Q.TY n.2(Dx-Sx)

2



VITE TEF M6x16mm
SCREW
VIS
SCHRAUBE
TORNILLO

Q.TY n.4

3



VITE TEF M6x35mm
SCREW
VIS
SCHRAUBE
TORNILLO

Q.TY n.2

4



RONDELLA Ø6mm
WASHER Ø6mm
RONDELLE Ø6mm
SCHEIBE Ø6mm
ARANDELA Ø6mm

Q.TY n.4

5



MOUSSE
Ø22x3mm Ø8mm Z1954
RUBBER PADS
MOUSSE
SCHUTZGUMMI
ESPUMA ADHESIVA

Q.TY n.8

6






NON INCLUSO
NOT INCLUDED IN THE BOX
PAS INCLUS DANS LA BOITE
NICHT ENTHALTEN IN
DER VERPACKUNG
NO ESTÁ INCLUIDO EN
EL PAQUETE

7

COMPONENTI ORIGINALI
ORIGINAL PARTS
PARTIES ORIGINALES
ORIGINAL BAUTEILE
COMPONENTES ORIGINALES

Q.TY n.-

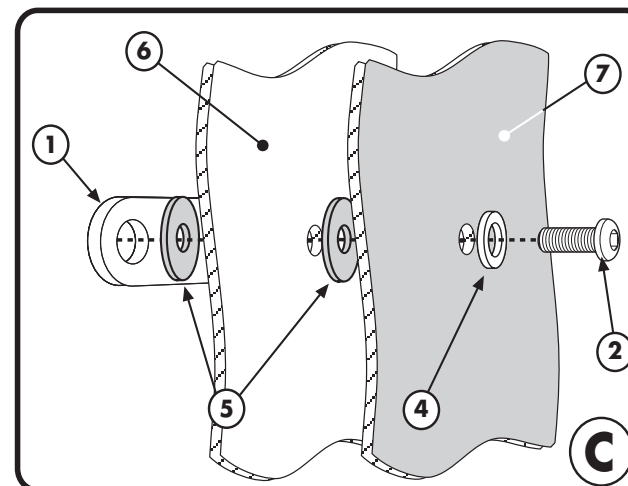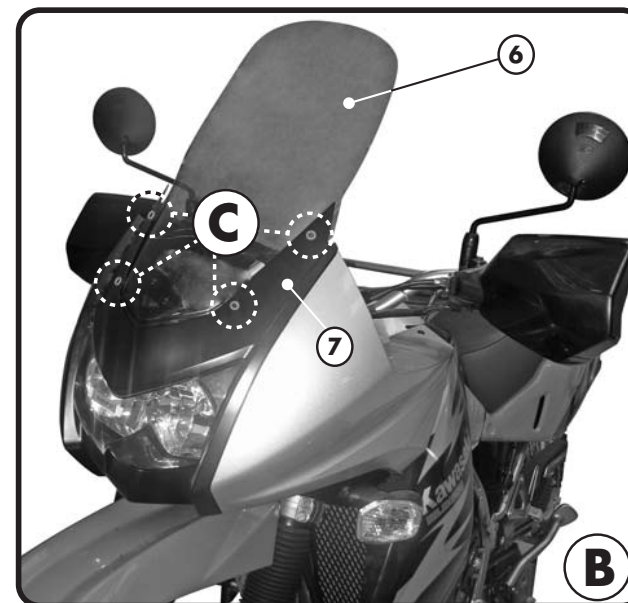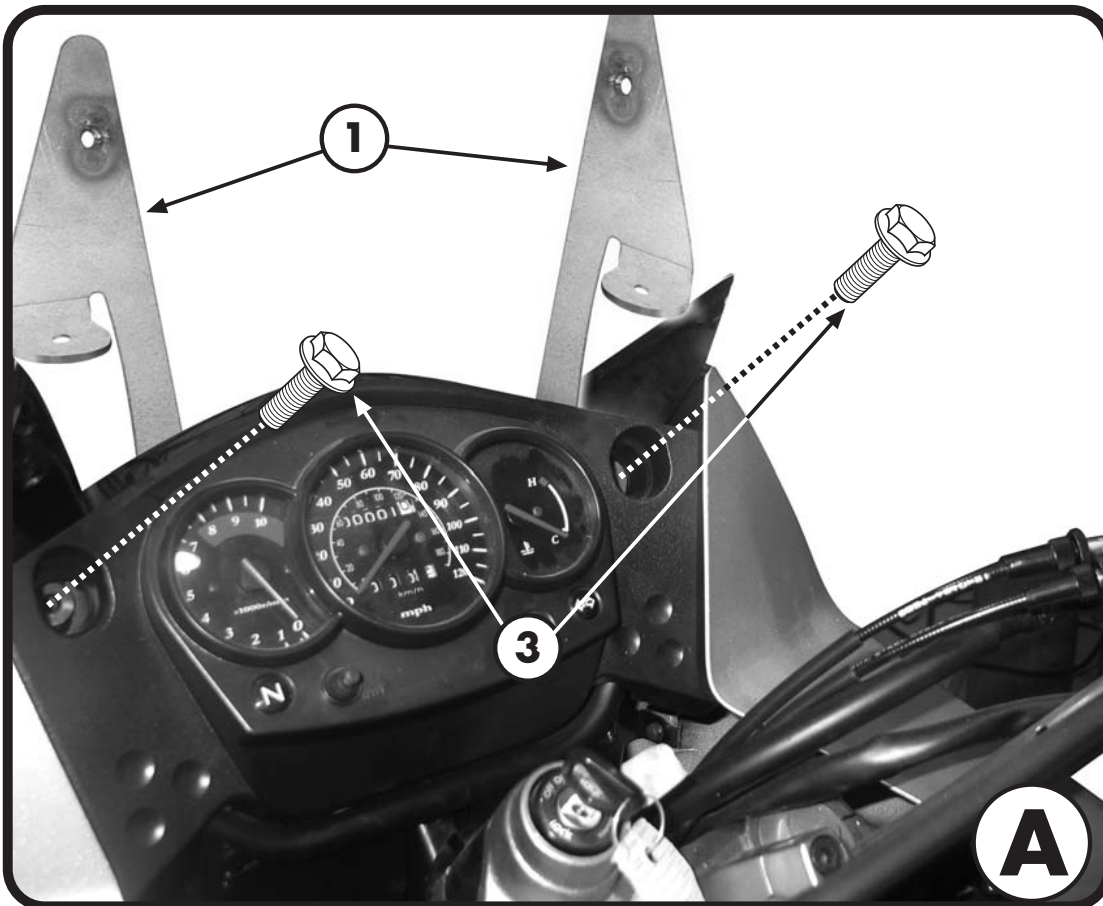

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
ANCLAJE ESPECÍFICO PARA

KAWASAKI KLR 650 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

1. DOPO AVER SMONTATO IL PARABREZZA ORIGINALE, INSERIRE E FISSARE I 2 SUPPORTI N°1 COME INDICATO IN FIGURA A;
2. POSIZIONARE IL PARABREZZA COME INDICATO IN FIGURA B;
3. PROCEDERE AL FISSAGGIO DEL PARABREZZA COME MOSTRATO IN FIGURA C.

GB MOUNTING INSTRUCTIONS

1. AFTER REMOVING THE ORIGINAL WIND-SCREEN, INSTALL THE TWO SUPPORTS, ITEM N°1, AS SHOWN IN PICTURE A;
2. SET THE WIND-SCREEN IN POSITION AS SHOWN IN PICTURE B;
3. FOLLOW THE INSTALLATION PROCEEDURE FOR THE WIND-SCREEN AS DIAGRAMMED IN PICTURE C.

F INSTRUCTIONS DE MONTAGE

1. APRES AVOIR DEMONTE LE PARE-BRISE D'ORIGINE, INSERER ET FIXER LES DEUX SUPPORTS N°1 COMME INDIQUE EN PHOTO A;
2. POSITIONNER LE PARE-BRISE COMME INDIQUE EN PHOTO B;
3. PROCEDER A LA FIXATION DU PARE-BRISE COMME ILLUSTRE EN PHOTO C.

D BAUANLEITUNG

1. DEMONTIEREN SIE DIE ORIGINALSCHEIBE UND BEFESTIGEN SIE DIE 2 HALTERUNGEN (POSITION NR. 1) WIE IM BILD A GEZEIGT;
2. POSITIONIEREN SIE DIE SCHEIBE WIE IM BILD B GEZEIGT;
3. BEFESTIGEN SIE DIE SCHEIBE WIE IM BILD C GEZEIGT.

ES INSTRUCCIONES DE MONTAJE

1. DESPUÉS DE HABER DESMONTADO EL PARABRISAS ORIGINAL , INSERTAR Y FIJAR LOS DOS SOPORTES N.1 COMO ESTÁ INDICADO EN LA FOTO "A";
2. COLOCAR EL PARABRISAS COMO SE INDICA EL LA FOTO "B";
3. PROCEDER FIJANDO EL PARABRISAS COMO FIGURA EN LA ILUSTRACIÓN " C".